

**OPERATOR MANUAL
AND PARTS LIST**

CARPET SWEEPER GENIUS-18 220 Volt



ENGLISH

USE AND MAINTENANCE MANUAL

INDEX

	page
GENERAL SAFETY INSTRUCTIONS	2
ASSEMBLY INSTRUCTIONS	4
MAINTENANCE	6
TECHNICAL DATA	6
TABLE 1	7
TABLE 2	10
TABLE 3	12
ACCESSORIES	14
CONFORMITY DECLARATION	15

These operating instruction provide you with all information necessary for correct , safe and prescribed usage and maintenance of the carpet sweeper (all the models). They must be kept where they are accessible to the user at all times.

PRESCRIBED USAGE

This machine is designed for the professional cleaning according to these operating instructions.
Any other usage, in particular, for the removal of types of dust which may be dangerous to health, is prohibited.

GENERAL SAFETY INSTRUCTIONS

This machine is designed and constructed according to the present state of the art and recognized technical safety standards. It is fitted with protective devices, following safety European standard rules. Dangers can occur in spite of this, in particular in the case of non correct use or non-compliance with the specifications and information in the operating instructions.

All our equipment are covered by international assurances against risks.

1) SOURCES OF DANGER

- Electrical voltage / Electric current
- Warning: Danger

Contact with voltage or current carrying parts carries the risk of electric shock which can result in serious injury or even death. Never touch damaged cables. Always switch off and disconnect the power supply before carrying out any work on the machine. Replace faulty cables immediately.

2) IMPROPER USAGE

Any usage of the machine for a purpose not covered under the “Prescribed usage” or contractually agreed purpose is not permissible. The use of the machine in an unserviceable condition or not in compliance with the following prescription is prohibited:

- Protective devices must not be removed or bypassed.
- Conversions and modification to the machine are not permitted.
- Defective supply cables are only to be replaced by original FIORENTINI cables.
- Coupling elements between mains supply or detachable extension cables must be at least splashproof.
- The machine is to be fitted with a type H circuit breaker for rated current of 10 A .

3) ORGANISATIONAL POINTS

It is the responsibility of the operator to ensure that:

- The machine is used only by personnel who have been instructed in its handling and authorized to use it.
- The recognized occupational safety regulations are observed.
- Any further national or internal company regulations are observed.
- All users are acquainted with the safety regulations and trained in the use of the specific machine.
- All users have read and understood the operating instructions.
- Responsibilities for the operation, maintenance and repair of the machine are clearly assigned and observed.
- Faults and damage are immediately notified to the Service Agent of FIORENTINI.

4) IN THE CASE OF AN EMERGENCY

- Pull out the mains connector plug.
 - Immediately apply recognized first-aid measures.
- After incidents, do not resume operation with the machine until it has been inspected by FIORENTINI authorized technical.

5) OPERATING FOR THE FIRST TIME

Delivery, instruction on safety rules, handling and maintenance as well as operation for the first time must be carried following the specification of this instruction book. The operator is responsible for instructing the users.

FURTHER SAFETY INSTRUCTIONS CONCERNING OPERATING AND MAINTENANCE ARE DETAILED IN THE RELEVANT SECTIONS AND MUST BE COMPLIED WITH!

IMPORTANT NOTES

BEFORE STARTING TO USE THE CLEANER PLEASE OBSERVE THE FOLLOWING POINTS:

- If you should discover any damage when unpacking the cleaner please inform your sale agency.
- The supply voltage must be the same as that shown on the nameplate.

ELECTRICAL CONNECTION AND SUPPLY

WARNING: - This appliance must be earthed!

- Check that the supply voltage details given on the rating plate are in accordance with your electricity supply.

CAUTION!

- The cleaner should never be used for picking up hot ashes, explosive fluids or undiluted acids or solvents. These include petrol, paint thinner and heating oil, all of which can generate explosive mixtures or vapors when swirled together with the suction air. Acetone, undiluted under acids and solvents would attack the materials from which the machine is made.

WARNING NOTE

- For cleaning or servicing the cleaner or when replacing parts, the motor should be switched off and the connecting plug be withdrawn from the socket.
- Care should be taken to ensure that the connecting cable is not damage by being driven over, crushed, strained, etc.
- The connecting cable should be regularly checked for any signs of damage or ageing.
- The machine must not be used if the connecting cable is not in a proper condition.
- For suction of dry dust, check that the filter are in the carpet sweeper.
- Do not clean the vacuum with a water pipe to avoid that water get through the vacuum head.

GOODS TO BE RETURNED

In case of goods to be returned for warranty replacement, it is necessary to have a written acceptance from FIORENTINI technical department before sending them.

All defective parts must be carefully packed in order to avoid further damages during transport.

Goods must be shipped ex-warehouse and followed by :

- serial number of the equipment where they were installed on;
- item code of the defective part;
- detailed description of the defect and of the conditions where it happened.


In case of defective electric or electronic goods, please return them separately from other materials, in order to help us in dividing dangerous wastegoods and recicle the (RAEE) as DER 2002/96/CEE LOW.



ASSEMBLY INSTRUCTIONS


CONNECTING OF THE CARPET SWEEPER TO THE BRUSH HEAD

Insert the upper part of the carpet sweeper into the brush head, keeping it in vertical position. The knob "1.1" must be turned leftwards during this connecting or disconnecting. After the insertion turn the knob in vertical position again.

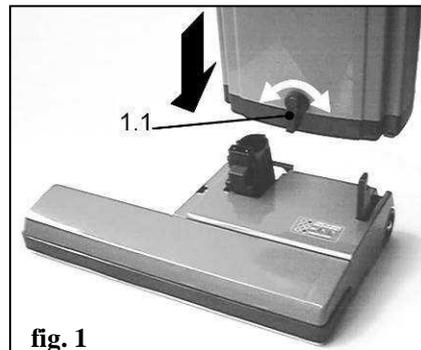


FLEXIBLE HOSE CONNECTION

After that the carpet sweeper is insert into the brush head connect the connection "2.1" to the upper carpet sweeper cover. The connection "2.2" must be keep in the low part of the upright, reaching the brush head joint.

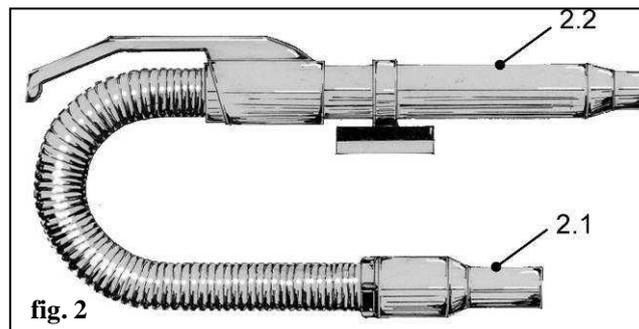

OPERATION/STAND-BY

To start operation, press the block pedal "3.1" and tilt the carpet sweeper backwards, after push on start switch. To stop operation, switch off keeping it in vertical position.

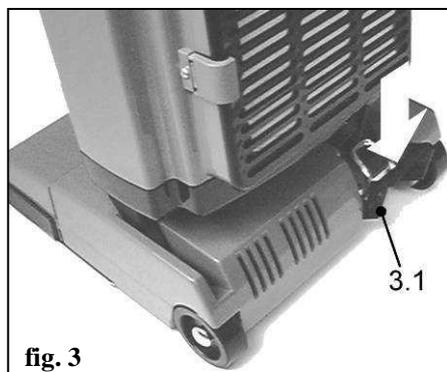

Attention:

Never drive the operating carpet sweeper above its own electric cable. Lift the carpet sweeper when going into stairs or high thresholds.


Notice: during operation with the suction hose, the manual pipe can get closed. The light will go on but there is no any failure.

PAPER BAG REPLACEMENT

To replace paper bag open the upper cover of the carpet sweeper. Pull out the paper bag.

BRUSH STRIP REPLACEMENT

Unscrew the 3 screws placed under the brush head “6.2” remove out the brush, remove the RH support “6.3” and remove the brush strip “6.1” and replace it with new one.

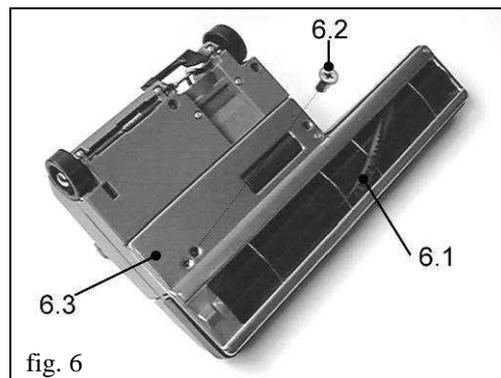

TROUBLESHOOTING

Blocked brush:

The brush motor is stopped by the electronic unit built-in in the carpet sweeper. The red light shows this state.

Remedy: Disconnect the carpet sweeper from mains, check if the brush is dirty and remove any possible blocking object. Restart the carpet sweeper.

Clogged hose:

Stop the carpet sweeper, remove the hose from the brush head. Draw the hose in horizontal position and start the carpet sweeper. If the obstruction still persists, remove it by means of a stab or similar mean.

TECHNICAL DATA

Suction data:

Vacuum motor: 5 A
Water lift: 71 inches
Air flow: 92 cfm (cubic feet a minute)
Voltage: 220 Volt, 50 Hz

Brushes:

Brush motor: 200 Watt
Traction: timing belts
Brush stripe: replaceable

Dimensions and Weight:

Height: 50 inches
Width: 18 inches
Weight: 17 lb

CONFORMITY DECLARATION

Conformity declaration is consigned with the support and the manual of operating and maintenance instructions.

**DICHIARAZIONE CE DI CONFORMITA'-DECLARATION OF CONFORMITY
DECLARATION DE CONFORMITE-EG-KONFORMITÄTSERKLÄRUNG-
DECLARACION DE CONFORMIDAD**
(ai sensi dell'allegato II 1.A della Direttiva Macchine 2006/42/CE)

La ING.O.FIORENTINI SPA
con sede in Via Piancaldoli 1896 Firenzuola, 50033, (FI)

DICHIARA/DECLARES/DECLARE/ERKLÄRT/ DECLARA

in qualità di costruttore sotto la propria responsabilità che la macchina
As manufacturer under its own responsibility that the machine
En tant que fabricant sous sa propre responsabilité que la machine
Als Hersteller, erkläre, in alleiniger Verantwortung, dass das Produkt
Como fabricante, bajo su responsabilidad que la máquina



Modello/model/modèle/Typ/modelo

Matricola/serial number/numero de série/

Fabriknummer/ Número matricula

Anno di costruzione /

Year of production/ Année de production/

Baujahr/ Año de producción

a cui la presente dichiarazione si riferisce è conforme alle prescrizioni
which this declaration refers to, is in conformity with the requirements
à laquelle se réfère cette déclaration, est en conformité avec les prescriptions
Auf das sich diese Erklärung bezieht, mit der normativen übereinstimmt.
que esta declaración se refiere, está en conformidad con los requisitos

della direttiva macchine 2006/42/CE/ Directive 2006/42/CE / de la Directive 2006/42/CE / der EG-Richtlinie 2006/42/EG über
Maschinen / De la directiva máquinas 2006/42/CE

della direttiva compatibilità elettromagnetica 2014/30/EU/ the Electromagnetic Compatibility Directive 2014/30 / EU / de la Directive
Compatibilité Electromagnétique 2014/30 / EU / elektromagnetische Verträglichkeit (EMV) 2014/30/EU / la directiva de
compatibilidad electromagnetica 2014/30/EU

della direttiva sui rifiuti di apparecchiature elettriche ed elettroniche (RAEE) 2012/19/UE/ Directive on Waste of Electrical and
Electronic Equipment (WEEE) 2012/19 / EU/ de la directive relative aux déchets d'équipements électriques et électroniques (DEEE)
2012/19 / UE / Elektrische und elektronische Geräte Abfälle (DEEE)2012/19/UE Directiva sobre residuos de aparatos eléctricos y
electrónicos (RAEE) 2012/19/UE/
(ISCRIZIONE AL REGISTRO PRODUTTORI A.E.E.: N° IT 1201000007391)

In particolare alle disposizioni normative
In particular, the regulatory rules
En particulier, les dispositions réglementaires
Gemäß den Bestimmungen der Richtlinie
En particular, las normas reguladoras

 
**EN ISO 12100, EN ISO 13857, EN ISO 13850, EN 60204-1, EN 349,
EN 953, EN ISO 4413, EN 60335, EN 60335-1, EN 60335-2-69, EN 60335-2-72, EN 55014-1, EN 55014-2,
EN 62233, EN 61000-6-2, EN 61000-6-4**

Il fascicolo tecnico è costituito da Ing.O.Fiorentini S.p.a. in qualità di persona giuridica - via Piancaldoli 1896 Firenzuola 50033 Fraz. Piancaldoli (FI) - Italia
The technical dossier consists of Ing.O.Fiorentini Spa as a legal person - via Piancaldoli 1896 Firenzuola 50033 Fraz. Piancaldoli (FI) - Italy
Le dossier technique est constitué de Ing.O.Fiorentini Spa comme personne juridique - via Piancaldoli 1896 Firenzuola 50033 Fraz. Piancaldoli (FI) - Italie
Die technische Dokumentation besteht aus Ing.O.Fiorentini Spa als a legal person - via Piancaldoli 1896 Firenzuola 50033 Fraz. Piancaldoli (FI) - Italy
El expediente técnico se compone de Ing.O.Fiorentini Spa como una persona jurídica - via Piancaldoli 1896 Firenzuola 50033 Fraz. Piancaldoli (FI) - Italia

Piancaldoli
Luogo e data

Ing. O. Fiorentini S.p.a.
Il Legale Rappresentante/president/gérant/ representante
Angelica Maria Cerutti

Firma



Mat. n.
Serial no.
Nr. de serie

Data di spedizione
Date of shipment
Date de spedition

Distributed by:

ING. O. FIORENTINI S.p.A.
“THE BEST IN FLOOR MACHINES”

FILIALI:

20132 MILANO – Fax. 02/2592779

Via Palmanova 211/a – Tel. 02/27207783 - 2564810

00012 Guidonia Montecelio (ROMA) – Fax. (0774)353419 - 353314

Via B. Pontecorvo 20 – Tel. (0774)357184 - 353015

STABILIMENTO:

50030 PIANCALDOLI (FI) – Fax. 055/817144

Loc. Rombola – Tel. 055/8173610